HILTON security

DXR20

Made in Italy
BT2014/35/UE
EMC2014/30/UE

RAEE

Radiocomando per sistemi via radio Serie XR

- **Inserimento e disinserimento delle centrali via radio serie XR.**
- **Programmazione del codice tramite i due pulsanti.**
- **Numero illimitato di radiocomandi utilizzabili per lo stesso impianto.**
- **Anello per aggancio al portachiavi in gomma ad alta resistenza.**
- **Funzione di 10 invii consecutivi del codice a tasto premuto.**
- **Frequenza di lavoro: 433,92Mhz**
- **Assorbimento max in trasmissione: 40mA**
- **Tensione nominale di alimentazione: 3v**
- **Dimensioni: 61x38x18mm**

SOSTITUZIONE DELLA BATTERIA

Svitare la vite posta sul fondo del telecomando per aprire il contenitore, togliere la vecchia batteria ed inserirne una nuova rispettando le polarità indicate sul contenitore.

All'inserimento della batteria il LED del telecomando deve emettere un lampeggìo: in caso contrario disinserire la batteria ed attendere qualche secondo prima di inserirla nuovamente.

Controllare il corretto funzionamento dei due tasti prima di richiudere il contenitore.

PROGRAMMAZIONE

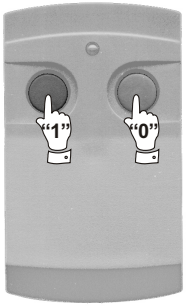

- Premere entrambi i tasti per alcuni secondi, finché il LED rimane acceso, poi rilasciarli.
- Programmare il radiocomando con il Codice di sistema utilizzando i due tasti:

- Tasto sinistro: per inserire "1".

- Tasto destro: per inserire "0".

Se si sospende l'immissione dei dati per più di trenta secondi il LED lampeggia per alcuni istanti e si esce automaticamente dalla fase di programmazione senza modificare il codice pre-esistente.

In caso di errore è possibile interrompere l'immissione dei dati, azionando i due tasti contemporaneamente per alcuni istanti: il LED lampeggia per qualche secondo e si interrompere la programmazione. Al termine dell'immissione di un codice corretto il LED emette un solo lampeggio e termina la fase di programmazione.

In caso di codice errato (tutti zero o tutti uno) il LED lampeggia per qualche istante ed esce dalla fase di programmazione senza accettare il codice.

Mantenendo un tasto premuto per lungo tempo il relativo comando viene inviato per 15 volte, poi l'XR20 attende il rilascio del tasto prima di consentire un nuovo invio. Questa funzione è utile per impedire l'inutile consumo della batteria nel caso un tasto restasse inavvertitamente premuto.

HILTRON security

DXR20

Made in Italy
BT2014/35/UE
EMC2014/30/UE

RAEE

Remote control for radio systems XR Series

- **Connection and disconnection of radio central units series XR.**
- **Programming code through the two buttons.**
- **Unlimited number of remote controls that can be used for the same installation.**
- **Rubber ring coupling to the key chain high-strength.**
- **Function 10 send consecutive of code key press.**
- **Working frequency: 433,92Mhz**
- **Current consumption max in trasmission: 40mA**
- **Rated supply voltage: 3v**
- **Dimensions: 61x38x18mm**

REPLACEMENT OF BATTERY

Unscrew the screw at the bottom of the remote control to open the container, remove the old battery and to connect the new observing the polarity indicated on the container.

To the connection of battery the LED of the remote control must emit a flash: otherqise disconnect the battery and wait some seconds before connect again.

To control the correct functionning of two buttons before closing again the container.

PROGRAMMING

- Press both the buttons for some seconds,as long as the LED stays on, then release them.
- Program the remote control with the system code using the two buttons :

-Button left : to insert “1”.

-Button right : to insert “0”.

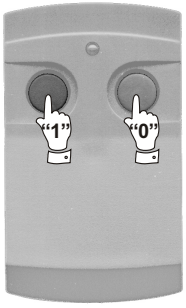

If you suspend input for more than thirty seconds the LED flashing for a few moments and gets out automatically from the programming phase without to edit the pre-existing code .

In the event of error it’s possible to stop the input, using the two buttons at the same time for a few moments: thel LED flashing for ome second and to stop programming. At the end of input of a correct code the LED emits only one flashing and programming phase ends.

If the code isn’t correct (all zero or all one) the LED flashing for a few moments and exit from programming phase without to accept the code.

Keeping press a button for a ling time the related command is sent 15 times, then l'XR20 wait the releasing the key before allow a new sending. This function is useful to prevent the unnencessary power of the battery in case a button stayed pressed accidentally.